 


RTIC

5500 6

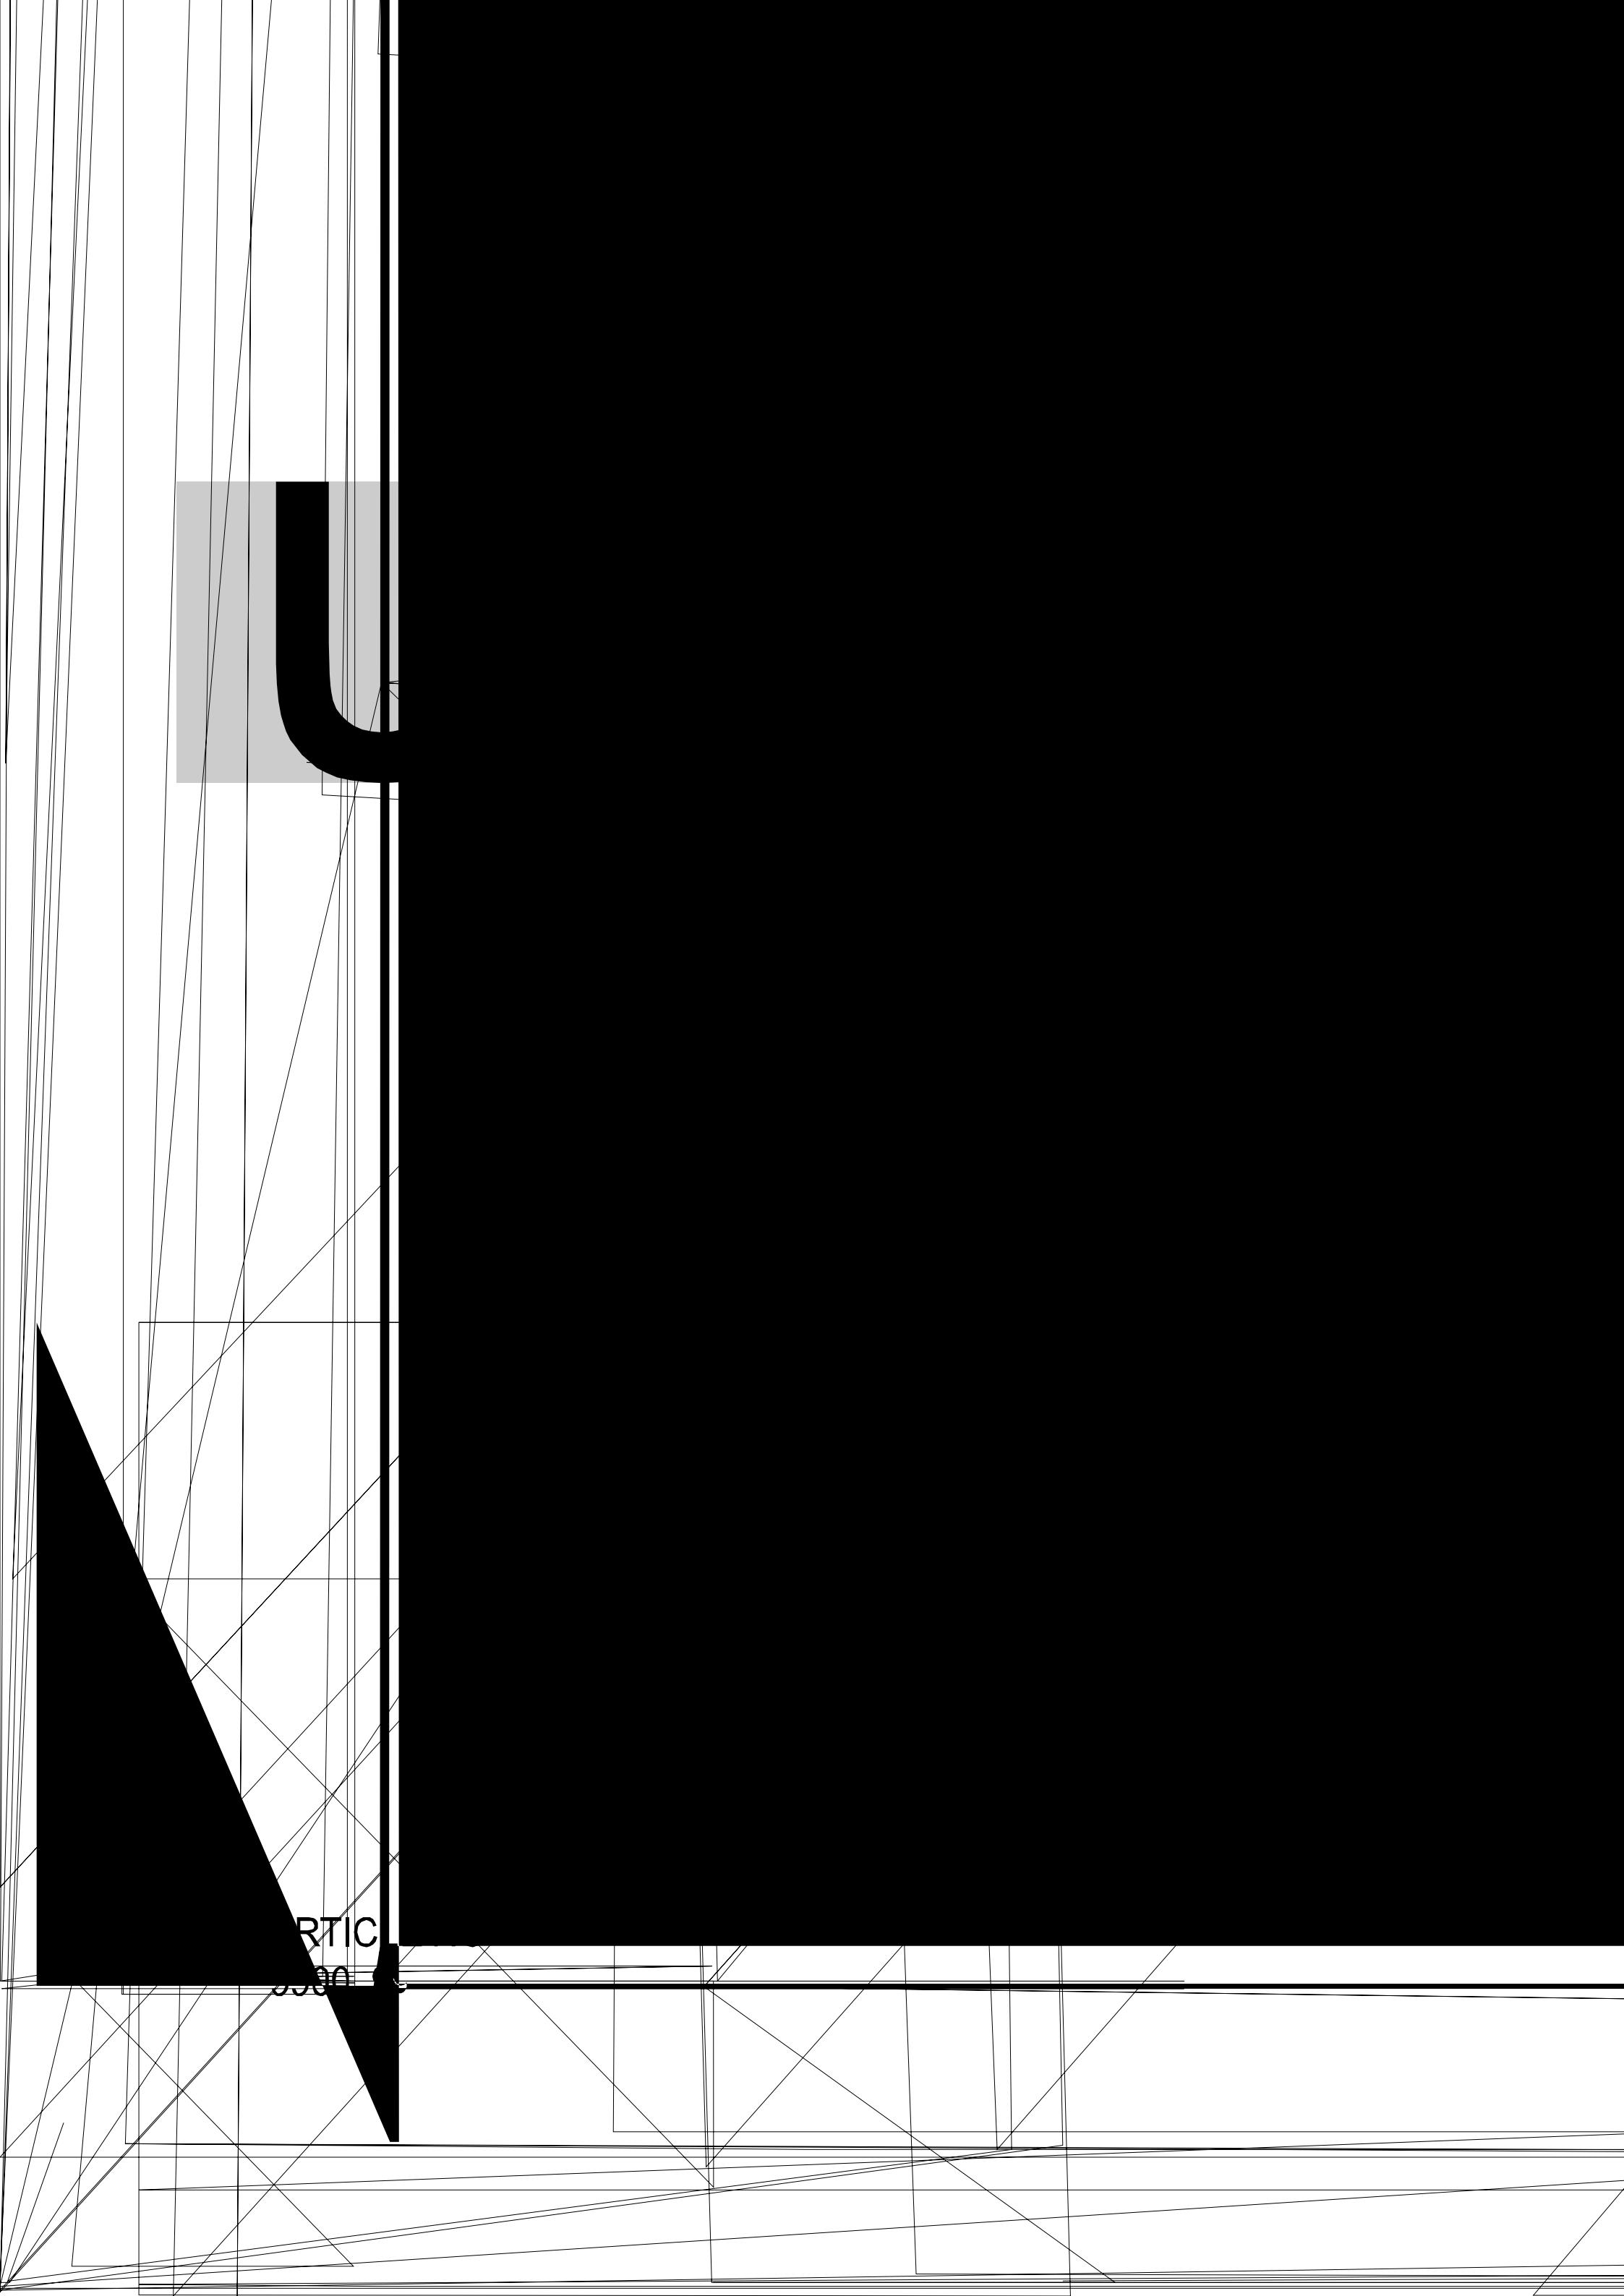

目 录

使用时注意事项

产品

 
装箱清单

使用说明

保养方法


常见故障分析及排除

.....
.....
.....
.....
.....
.....
.....
.....

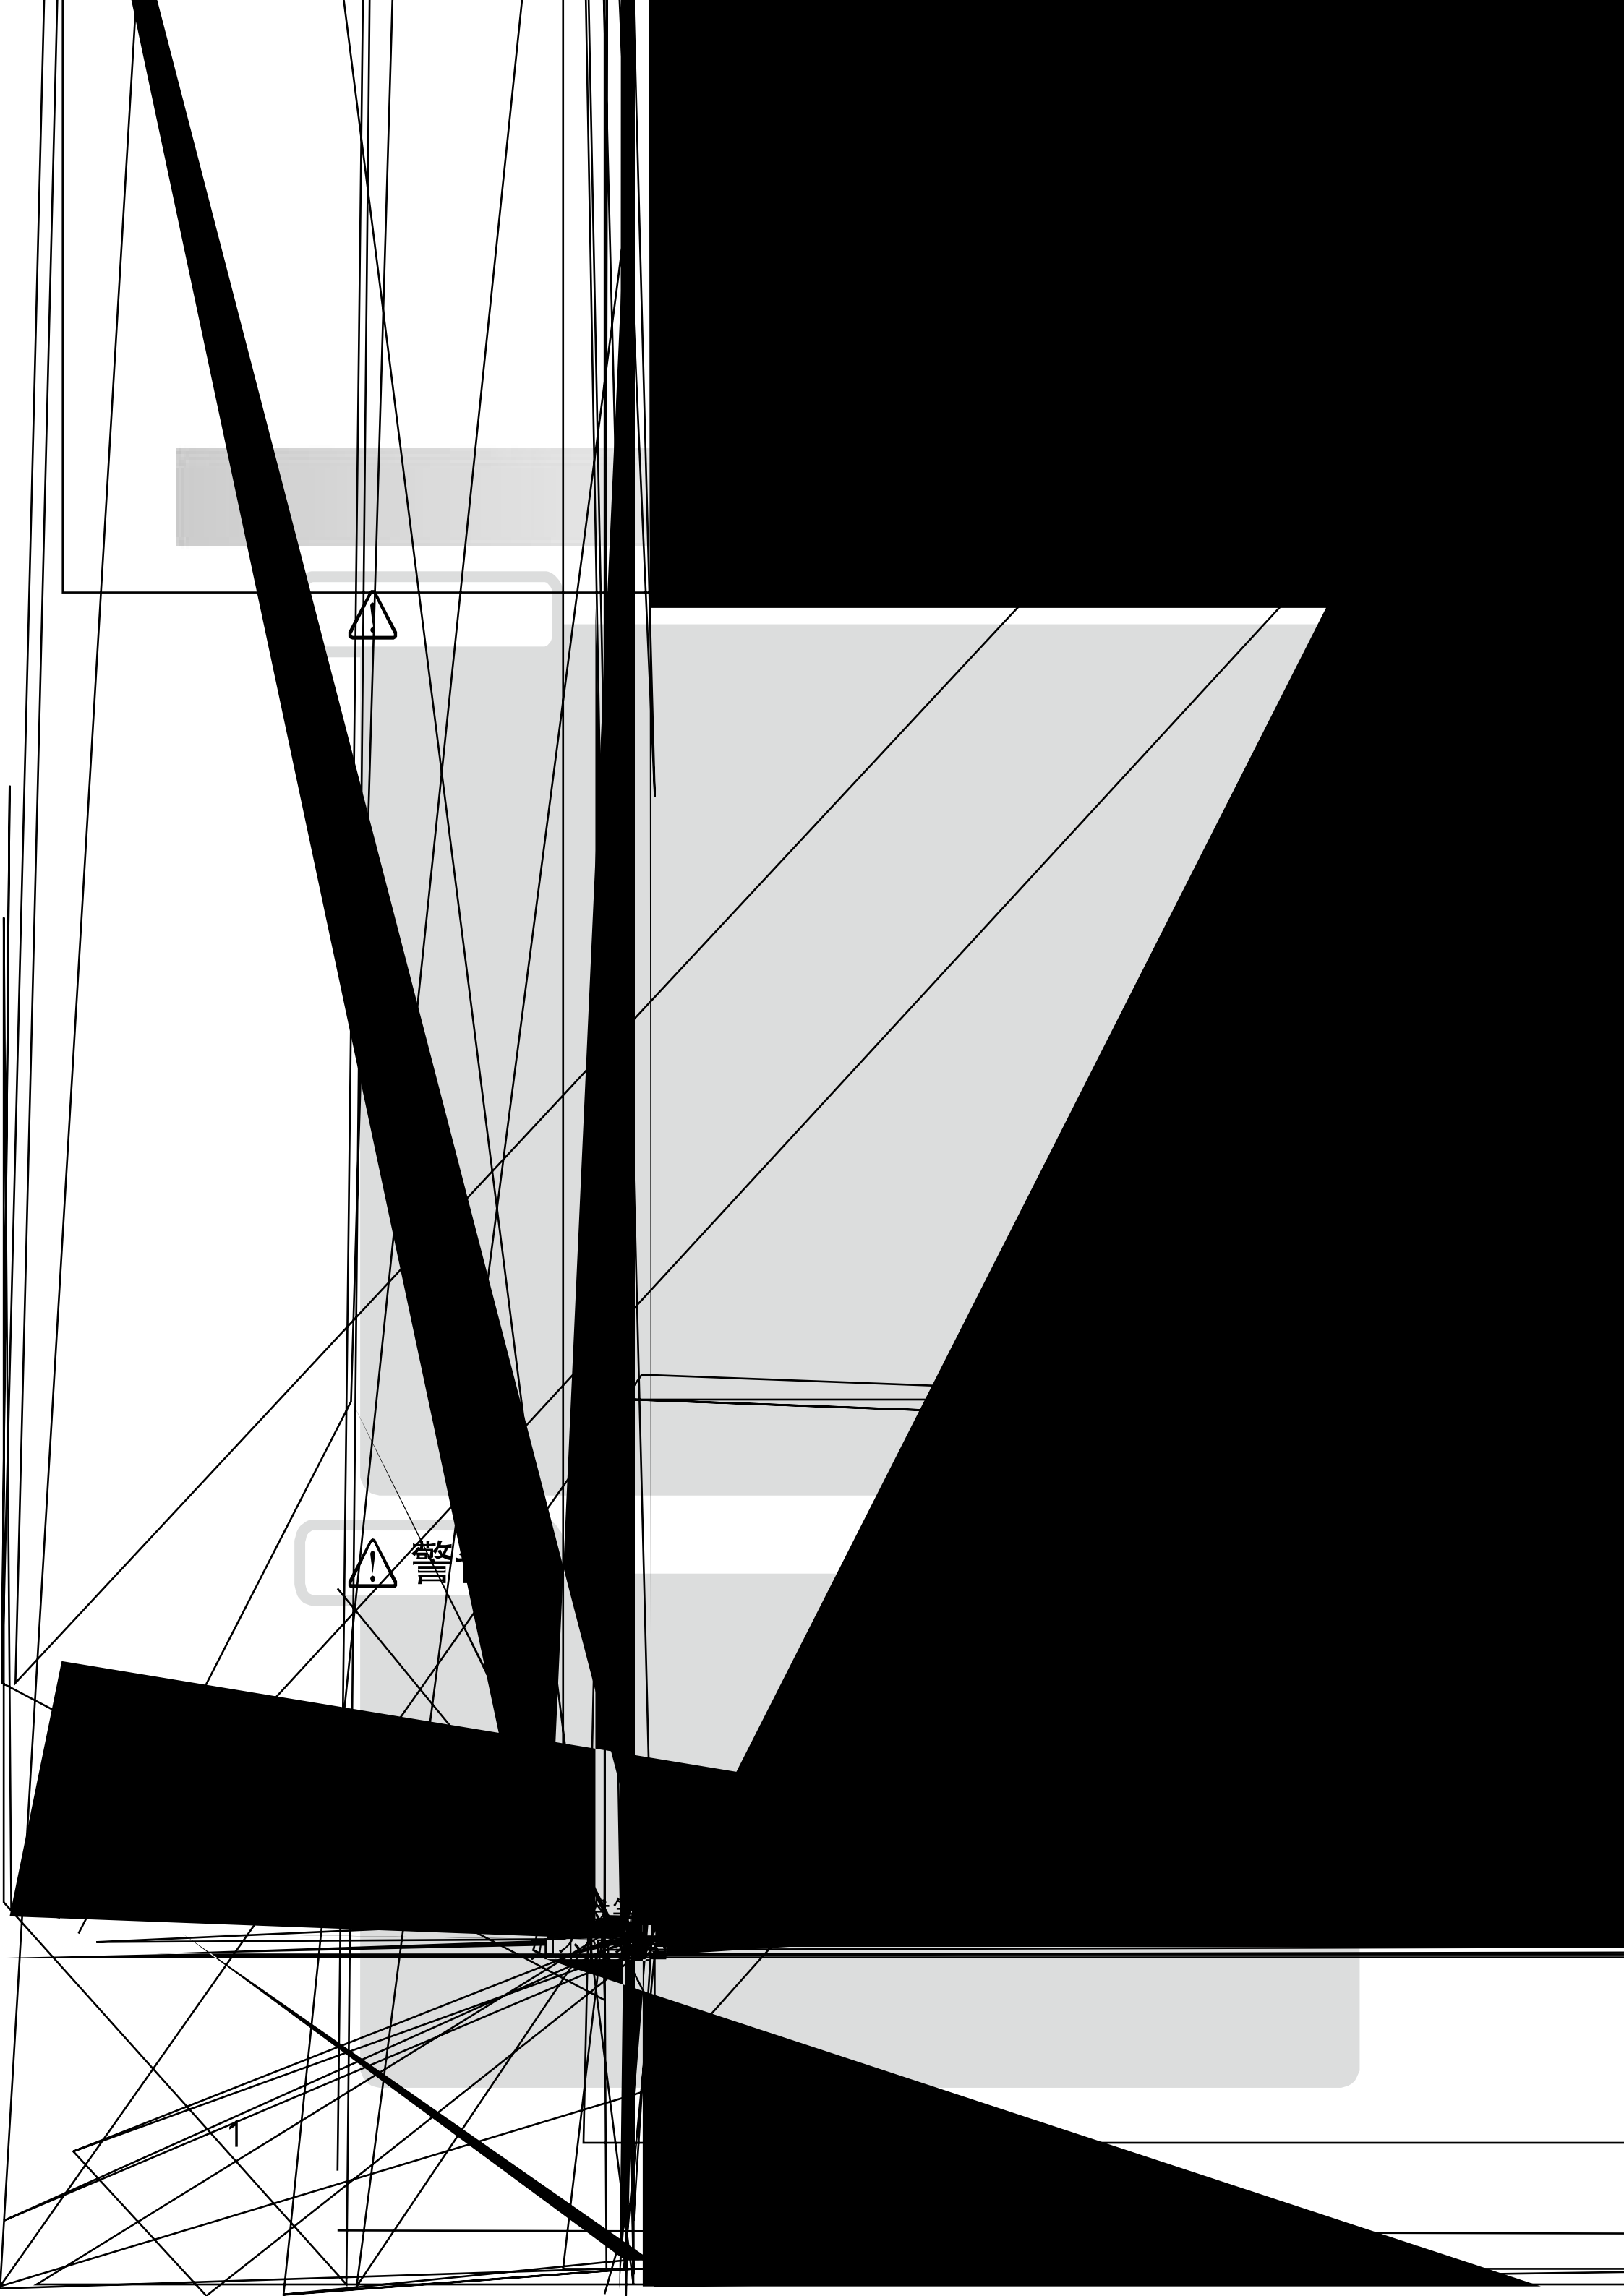



产品参数

 1台

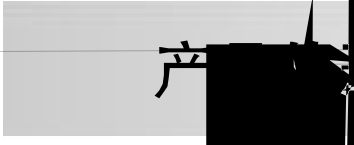

序

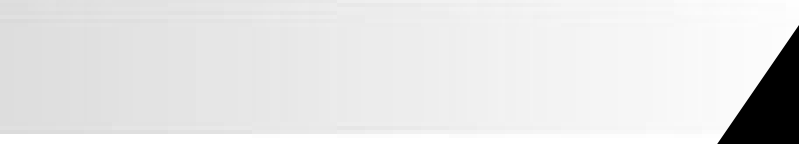 

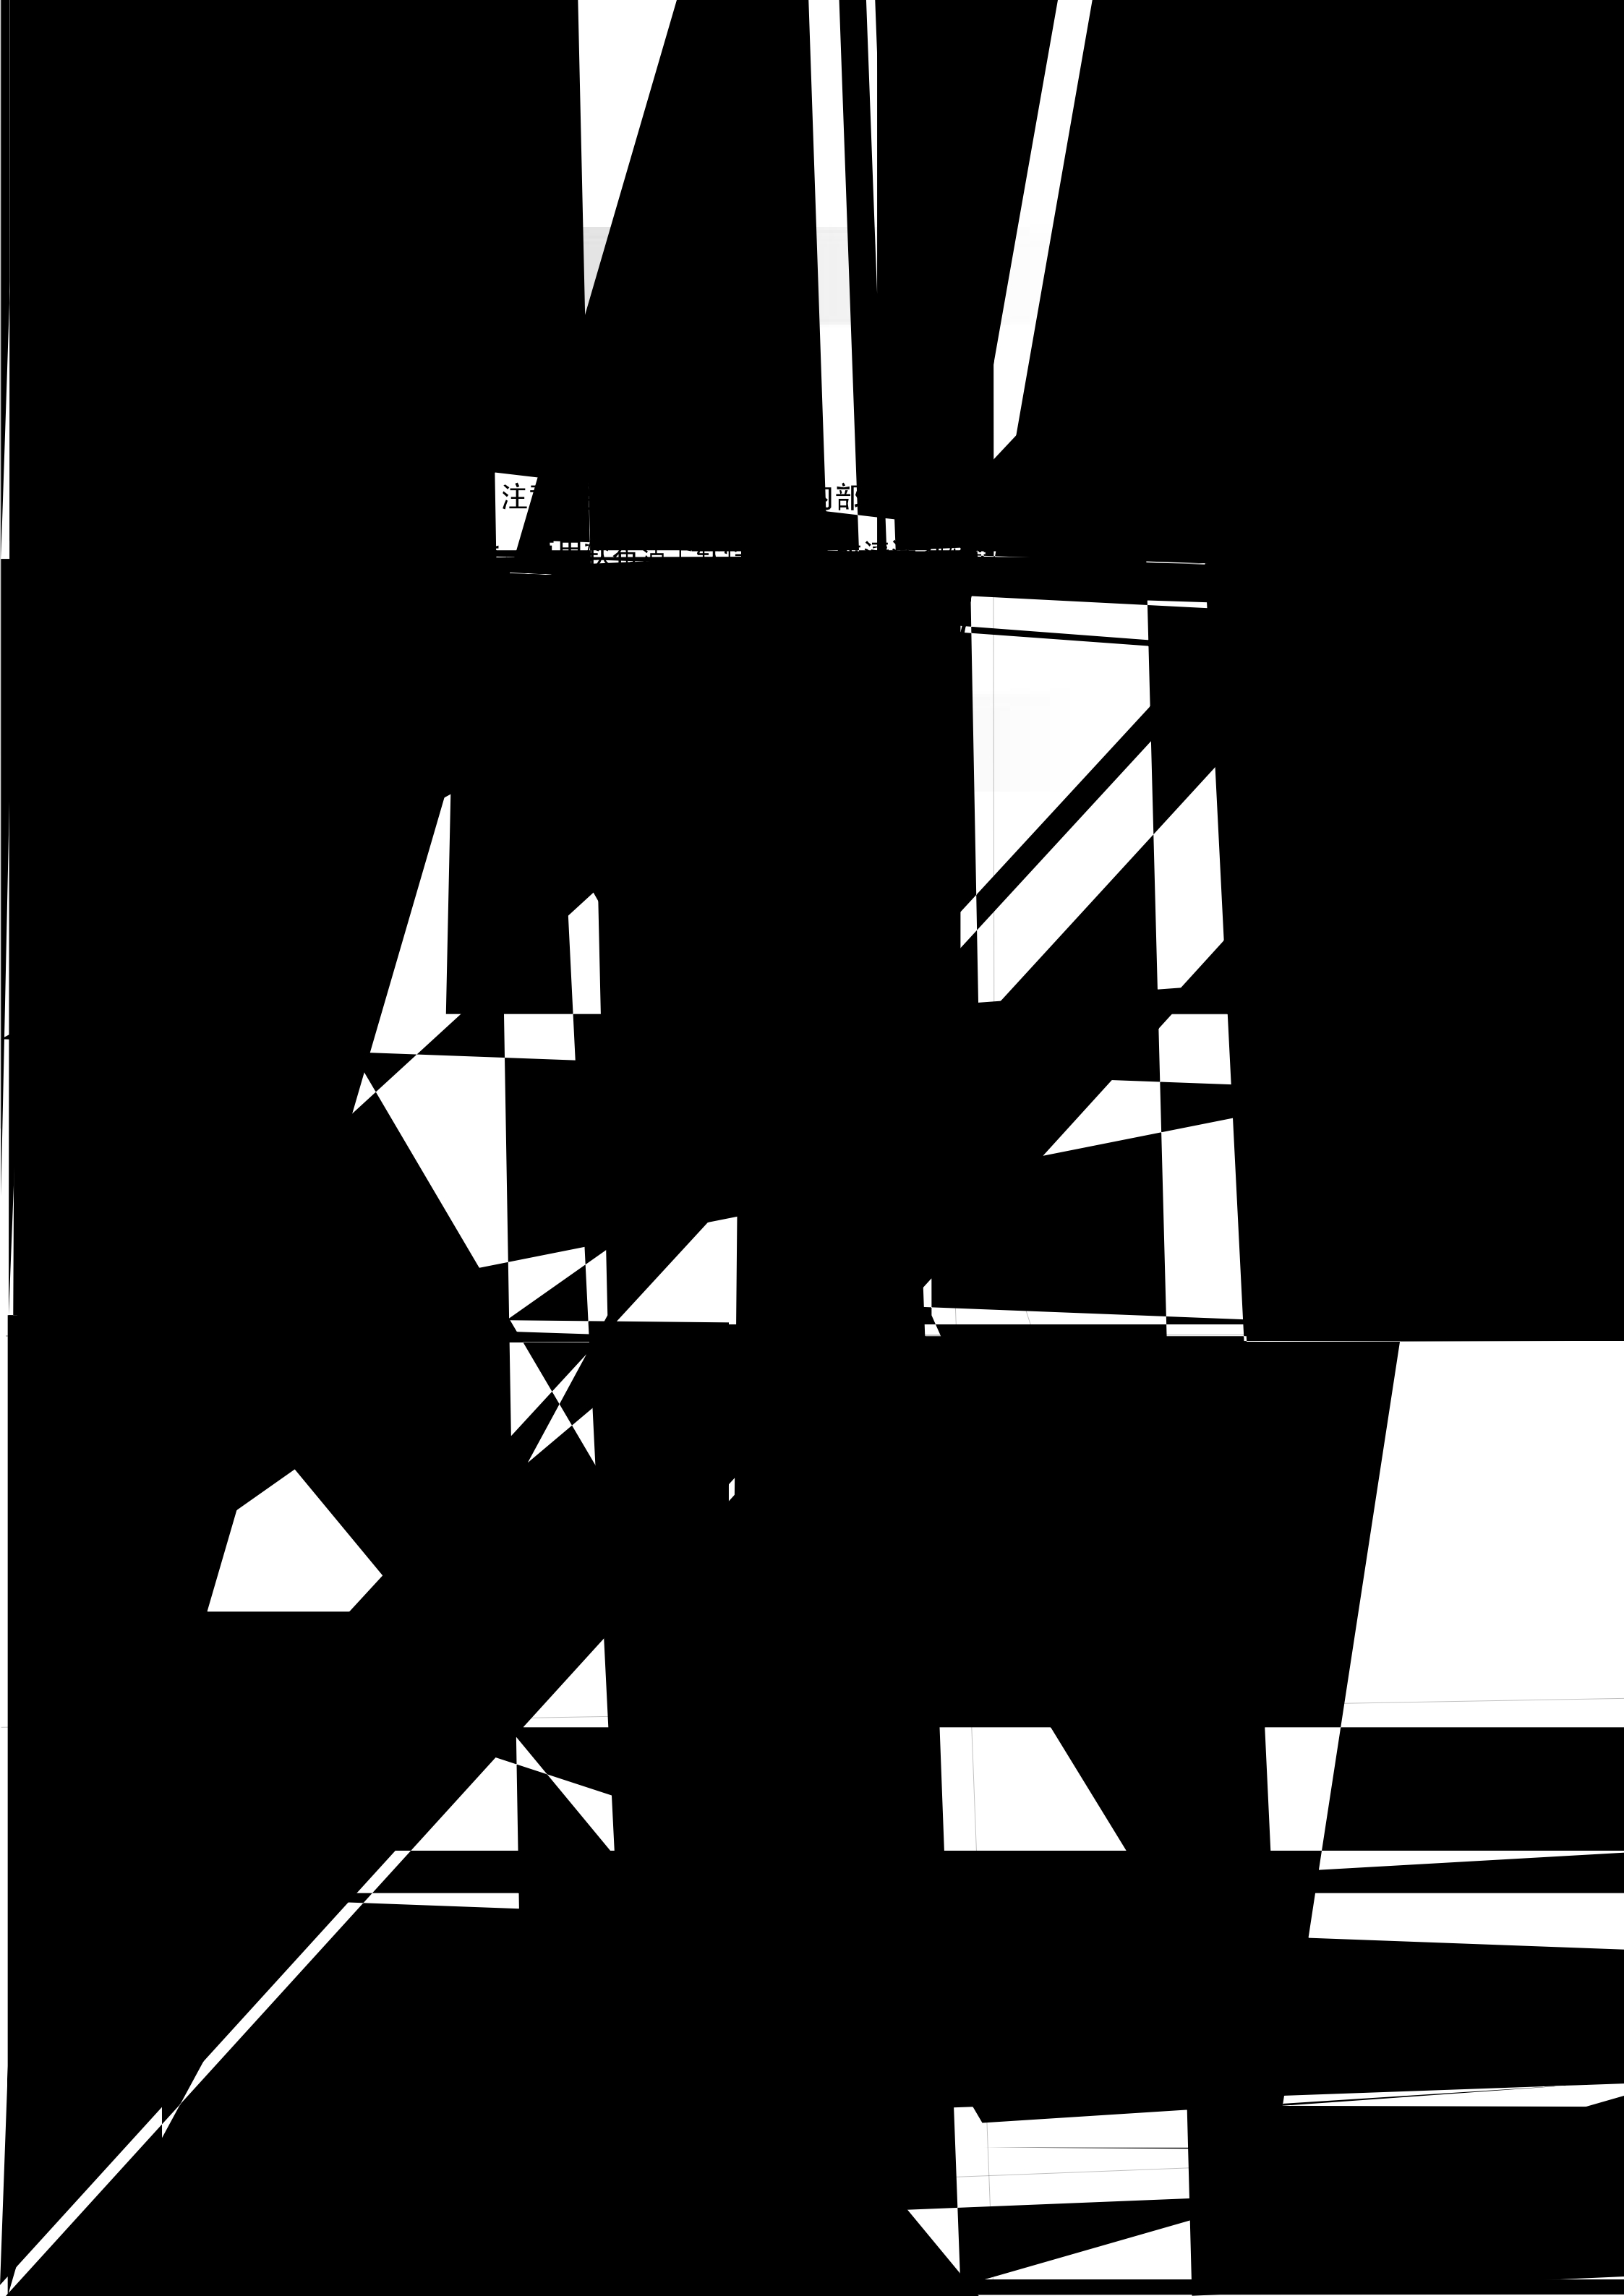 

注

部





When th

Maintenance

- 1. Pull out the power plug from the socket of power supply before maintenance
- 2. The maintenance by user is only limited to cleaning visible surface of the shredder.
- 3. When cleaning the surface of the shredder,do not allow water to drop into the interior of the shredder.

Trouble Analysis & Troubleshooting

	TROUBLE ANALYSIS	TROUBLESHOOTING
	plug disconnect, no power	c

